


S H E R L E




W A G N E R
INTERNATIONAL

INSTALLATION GUIDE

WALLMOUNT VOLUME CONTROL
& DIVERTER TRIM

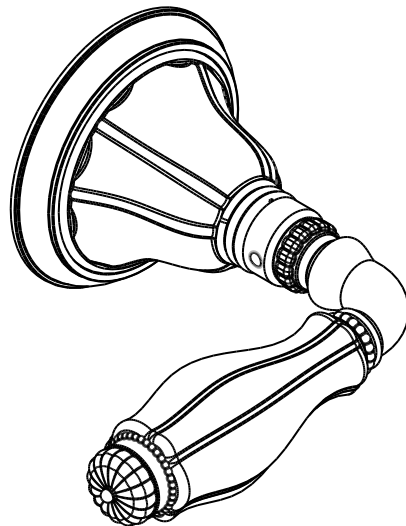


Installation tools that may be needed:

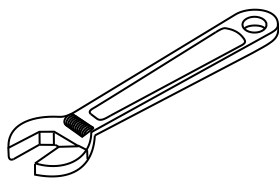


Wallmount Volume Control and Diverter Trim Installation

1

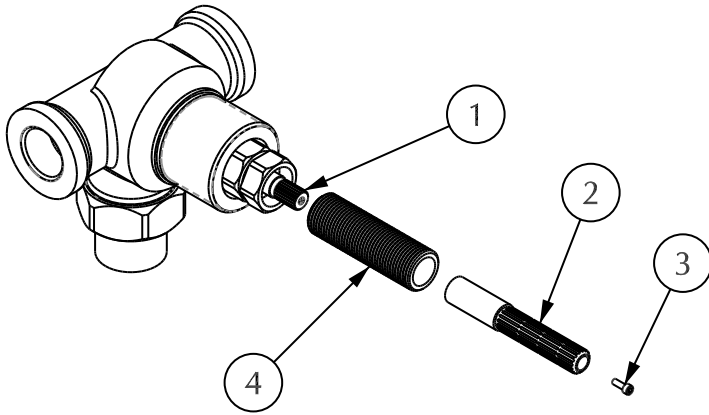

1. Install stem extension (2) onto cartridge stem (1) using screw (3).
2. Thread allthread (4) into top of cartridge (1).

2

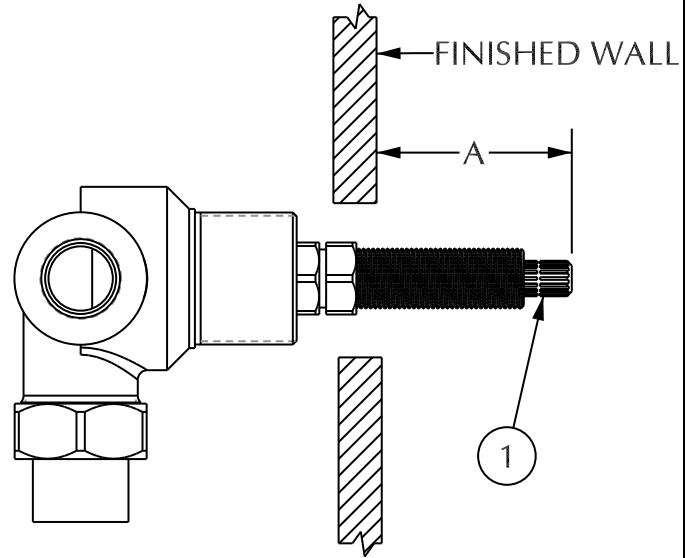


1. Measure distance "A" as shown above and compare to column A on chart on page 4.

IF "A" AS MEASURED IS **GREATER** THAN THE VALUE IN COLUMN A PER MODEL BEING INSTALLED, MARK NEEDED LENGTH ON STEM EXTENSION (1), REMOVE FROM VALVE THEN CUT TO LENGTH. RE-INSTALL ON VALVE.


IF "A" AS MEASURED IS **LESS** THAN THE VALUE IN COLUMN A PER MODEL BEING INSTALLED, A LONGER STEM EXTENSION IS NEEDED. ORDER EXT-KIT-XL EXTRA LONG EXTENSION KIT.

Wallmount Volume Control and Diverter Trim Installation

3

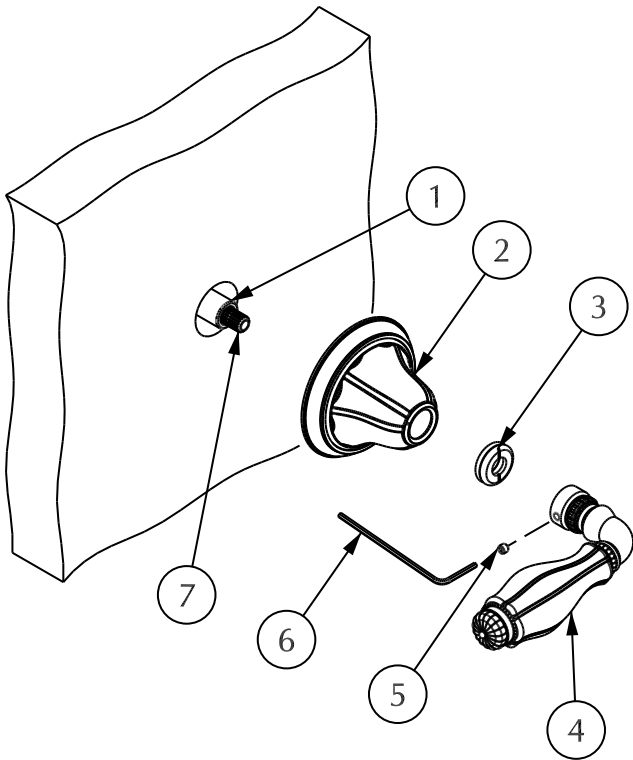

4

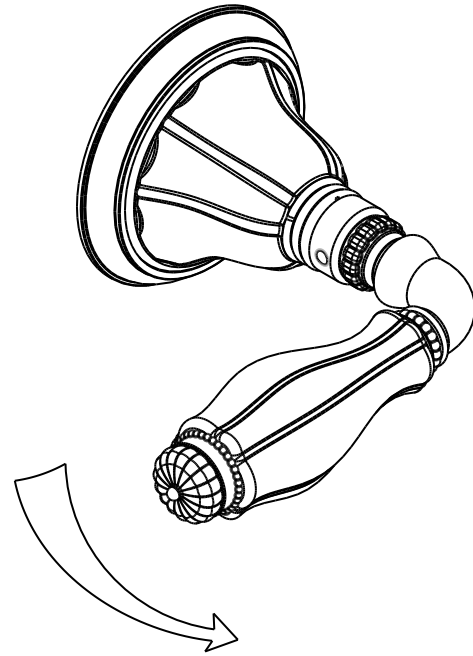

1. Place escutcheon (2) over valve.
2. Thread escutcheon nut (3) onto allthread (1) until secure and escutcheon (2) does not move.

NOTE: Some models utilize an escutcheon nut (3) that threads directly into the top of end valve, not the allthread (1). For these models, there will be no allthread (1).
3. Mount lever/knob (4) onto cartridge stem (7) and secure by tightening set screw (5) with hex wrench (6).
4. Turn lever to full off position and check to make sure it is straight. If it requires adjustment, remove set screw (5) and re-install lever/knob (4) to proper position, then re-install set screw (5).


1. Turn handle on and off to check for proper installation and water flow.

Wallmount Volume Control & Diverter Stem Extension Length

Handle Dimensions

| Model No. | A |
|-----------|-----------------|
| 0907 | 2" [50.8mm] |
| 0910 | 2-3/8" [60.3mm] |
| 0912 | 2-5/8" [66.7mm] |
| 0913 | 2-3/8" [60.3mm] |
| 0914 | 2-1/4" [57.2mm] |
| 0915 | 2-5/8" [66.7mm] |
| 0916 | 1-3/4" [44.5mm] |
| 0917 | 2-5/8" [66.7mm] |
| 0918 | 2-5/8" [66.7mm] |
| 0919 | 2-5/8" [66.7mm] |
| 0920 | 2-5/8" [66.7mm] |
| 0921 | 2-5/8" [66.7mm] |
| 0923 | 2-3/8" [60.3mm] |
| 0931 | 2-3/8" [60.3mm] |
| 0932 | 2-3/8" [60.3mm] |
| 0933 | 2-1/4" [57.2mm] |
| 0934 | 2-3/8" [60.3mm] |
| 0980 | 2-3/8" [60.3mm] |
| 0981 | 2-3/8" [60.3mm] |
| 0990 | 2-3/4" [69.9mm] |
| 0991 | 2-3/4" [69.9mm] |
| 0992 | 2-3/4" [69.9mm] |
| 0993 | 2-3/4" [69.9mm] |

| Model No. | A |
|-----------|-----------------|
| 1029* | 2-3/4" [69.9mm] |
| 1029** | 2-3/8" [60.3mm] |
| 1029*** | 2-3/8" [60.3mm] |
| 1030* | 2-3/4" [69.9mm] |
| 1030** | 2-3/8" [60.3mm] |
| 1030*** | 2-3/8" [60.3mm] |
| 1040 | 2-3/8" [60.3mm] |
| 1065** | 2-3/8" [60.3mm] |
| 1065*** | 2-3/8" [60.3mm] |
| 1097* | 2-3/4" [69.9mm] |
| 1098 | 2-3/8" [60.3mm] |
| 2010 | 2" [50.8mm] |
| 2015 | 2" [50.8mm] |
| 2020 | 2" [50.8mm] |
| 2050 | 2-1/2" [63.5mm] |
| 2103 | 2" [50.8mm] |
| 2104 | 2" [50.8mm] |
| 2106 | 2" [50.8mm] |
| 2108 | 2" [50.8mm] |
| 2112 | 2" [50.8mm] |
| 2120 | 2" [50.8mm] |
| 2150 | 2-1/2" [63.5mm] |

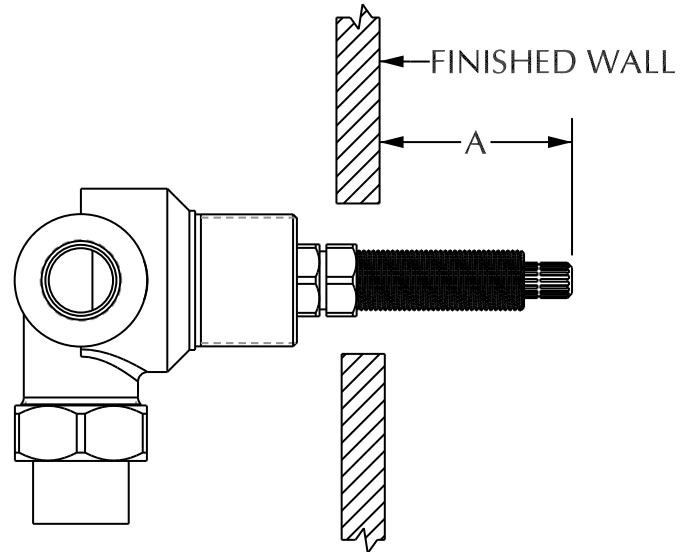

* INCLUDES ALL PORCELAIN TRIM
 ** INCLUDES ALL ONYX, ROSE QUARTZ, ROCK CRYSTAL AND AMETHYST
 *** INCLUDES MALACHITE, TIGER EYE, LAPIS LAZULI AND RHODOCHROSITE

Wallmount Volume Control & Diverter Trim Parts List

| Item | Part Number | Description |
|------|---------------|-----------------------------|
| 1 | 11926 | Set Screw Kit |
| 2 | EXT-KIT-WLMT* | Wallmount Extension Kit** |
| 3 | EXT-KIT-XL* | Extra Long Extension Kit*** |

* SPECIFY FINISH WHEN ORDERING

** Contains 2-1/2" and 3-1/2" stem extensions

*** Contains 4-1/2" stem extension

